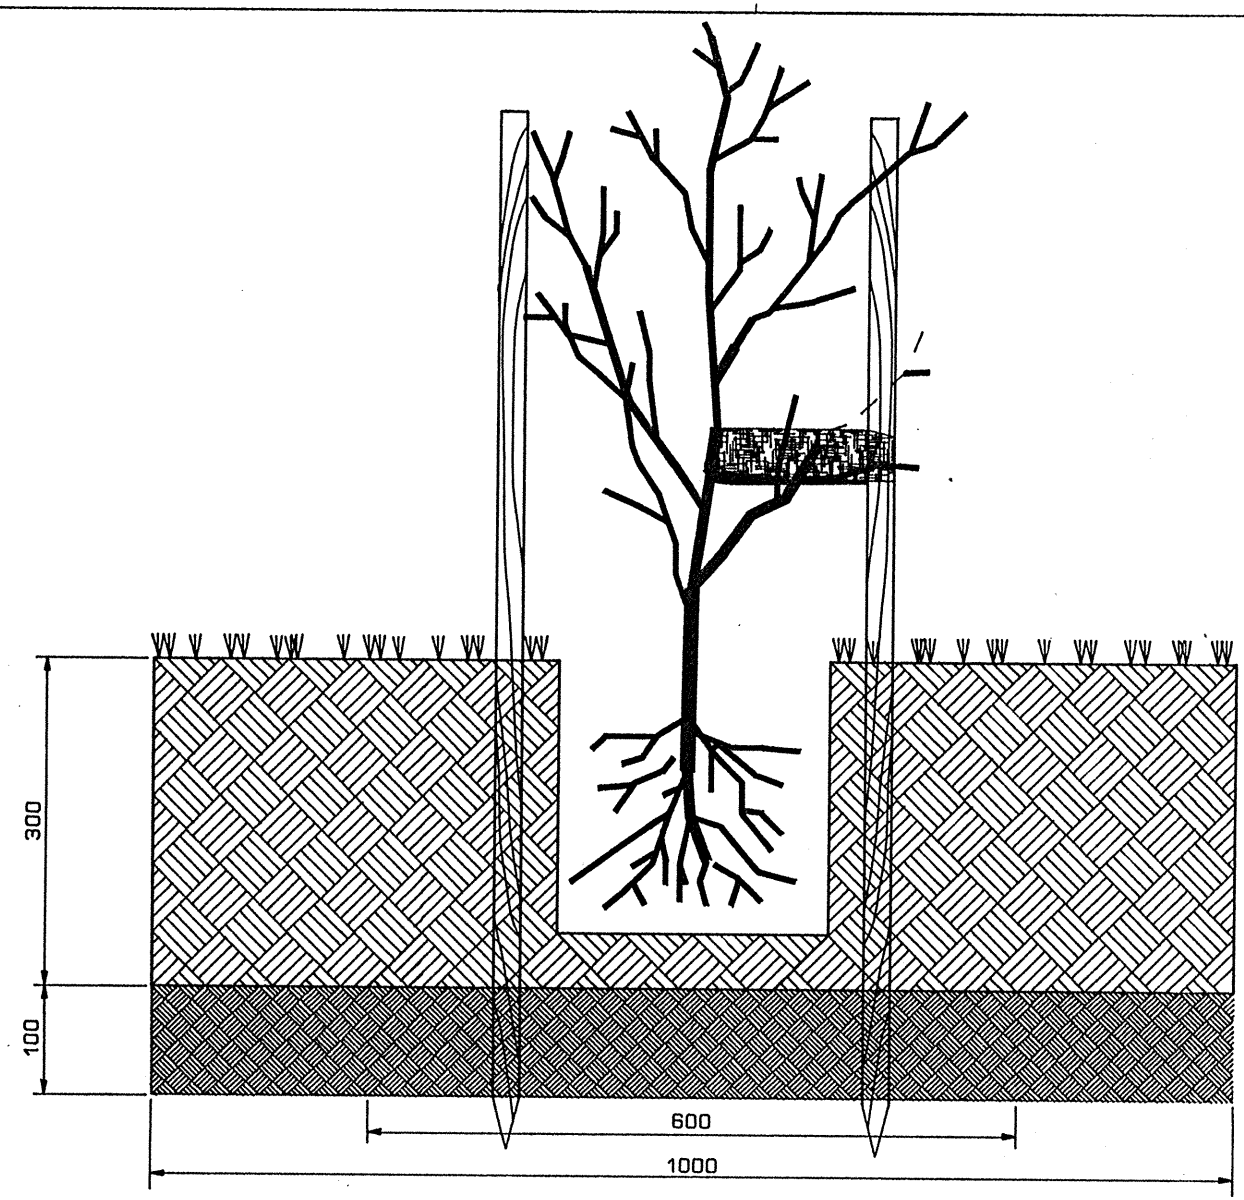

STAGE 1

Excavate planting holes to minimum 1000x1000x300 mm deep below finished levels.

STAGE 2

Break up sub-base to 100 mm.

STAGE 3

Backfill with 50/50 mixture of site soil/mushroom compost mixed with 130 gr. of fertiliser.

STAGE 4

Place tree/shrub into hole.

STAGE 5

Install two 1500x30x30mm stakes to each tree taking care to avoid root ball.

STAGE 6

Fix two 50 mm wide webbing ties to each tree.

STAGE 7

Leave 600x600mm opening in grass and finish soil level 50mm below the surrounding grass.

N

SCALE 1: N.T.S.

SUBDIVISION CODE

CITY OF SHOALHAVEN

TREE PLANTING GUIDE

ENGINEERING WORKS MANAGER

.....

DRAWN	C. FIESELER
CHECKED	J. BLOM
PLAN REF.	263729
DATE	05. MAY 1994